


# CS506 EN assembly instruction


Document No: T-20-18  
Release Date: 09-03-2023  
Rev. No / Date:

1

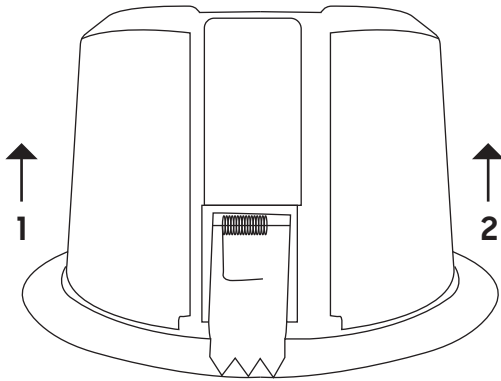

Hold the front side of the speaker with your hand, pull the 1st side up and then the 2nd side up to open the cover.


2

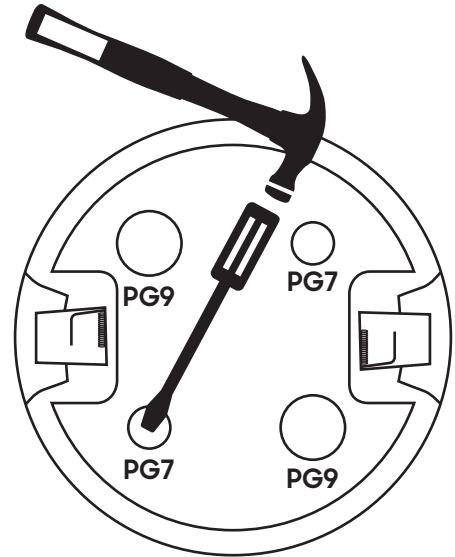

According to the size you want, break one of the holes and plug PG type adapter. Do not leave open holes.

3

Connection type without fuse  
Connect your 100V speaker line to one of the 3W or 6W terminals.

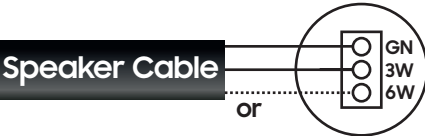


Fused connection type  
The fuse is inside the box.




Use at least 2x1.5 liycy speaker cable.

4

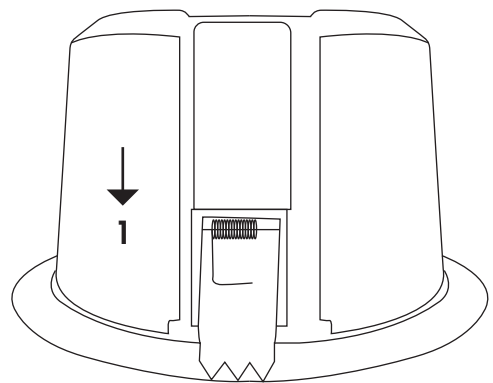

Insert it properly according to the channels do not leave any gaps.


5

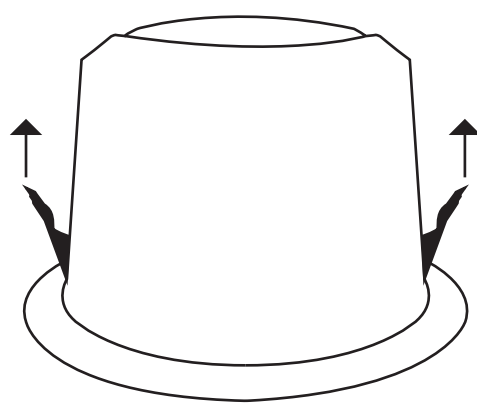

Lift both of the side hooks upwards.

6

Drill a 15cm hole in the false ceiling.

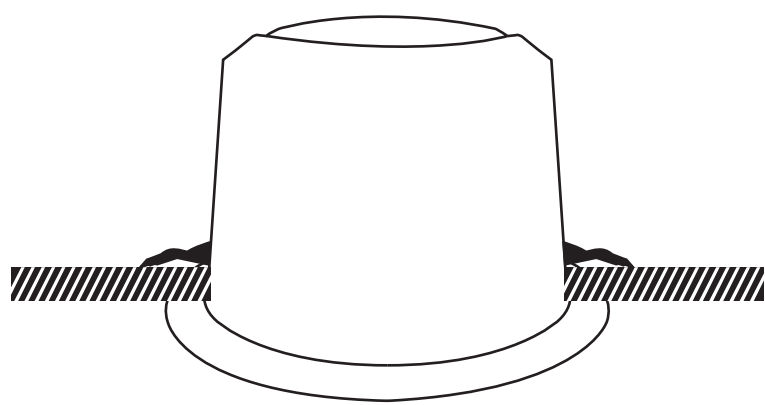

Snap it into place on the ceiling and gently leave the hooks to fit the speaker in. Do not leave gaps on the grill side.